

7005-R Combination Ratchet Winch Bar



WARNING

Failure to read, understand and comply with the following warnings and instructions may result in serious personal injury or death

Inspect the Winch Bar and winch for defects before each use. Do not use if defective; do not repair; immediately remove from service. Do not alter or increase the length of the handle.

Position the body properly and keep both feet flat on the ground during use.

When using the Winch Bar to release a lever binder:

1. Follow the lever binder manufacturer's recommendations

2. Lever binder handle must be fully inserted and securely locked in the Winch Bar cradle. Failure to properly secure the lever binder handle in Winch Bar cradle may cause damage or failure of the Winch Bar or lever binder, leading to serious personal injury or death

3. Position body out of the handle's rotation path


Refer to local, state, and federal regulations for applicable loading and transportation procedures and requirements.



OPERATING INSTRUCTIONS

To Tension:

1. Slide the Winch Bar housing over the winch cap
2. Insert the locking pin through the housing hole, both holes of the winch cap and out of the housing hole at the opposite end
3. Engage the Winch Bar pawl with the Winch Bar sprocket for the desired rotation direction
4. Position body out of the ratcheting motion path
5. Ratchet the Winch Bar to apply tension to the tiedown assembly
6. Check that the winch pawl is fully engaged in the winch sprocket teeth before releasing the Winch Bar
7. Remove the locking pin and Winch Bar

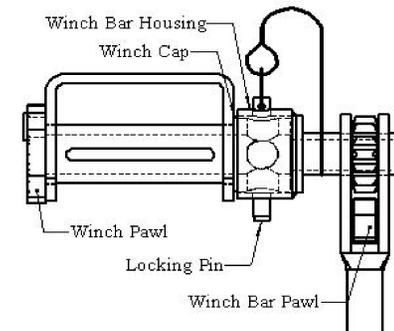

To Release:

1. Confirm the winch pawl is fully engaged before starting each operation
2. Slide the Winch Bar housing over the winch cap
3. Insert the locking pin through the housing hole, both holes of the winch cap and out of the housing hole at the opposite end
4. Engage the Winch Bar pawl with the Winch Bar sprocket for the desired rotation direction
5. Position body out of the ratcheting motion path
6. Operate the Winch Bar to release the winch pawl and tiedown assembly
7. Repeat steps 4, 5, & 6 as necessary to release strap tension
8. Remove the locking pin and Winch Bar